

## Inlet Check Valve

The inlet check valve may be used on naturally aspirated compressors to prevent oil misting during the unloaded cycle. **Do Not** use the inlet check valve if the compressor inlet is connected to the pressure side of the supercharger or turbocharger.

### Important


Installation of the inlet check valve assembly **must** be as shown in all illustrations.

VMRS - 13-009-007

Device Code 3408

## Applications & Kits


Comp. Model	Kit	Comments
TF 300	—	Not available for TF300
TF400	107567	
BX2150	See Illustration & Notes Below	
500	107567	
501	107567	
550	107567	
700	107567	
750	107567	
1000	107567	Two kits required
1400	107567	Two kits required

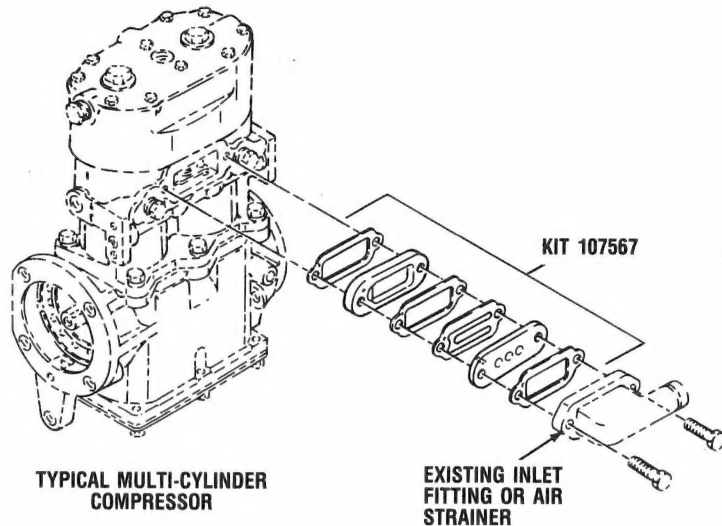

## BX-2150 Cylinder Heads

### Old Style

**Kit 104670  
Adapter 297871 REQUIRED**

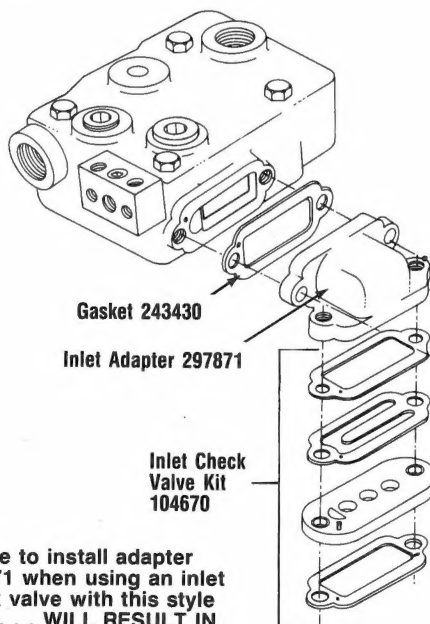

### New Style

**Kit 104670 Adapter NOT REQUIRED**

